

Dodge, Jeep 3.7L Engines

Tensioner Installation



1. **DO NOT** pull the locking pin until the tensioner is fully installed with contact on the tensioner arm.
2. Tighten tensioner bolts to 250 inch lbs. (Nm 28)
3. Pull locking pin to activate the tensioner.