

TENSIONER INSTALLATION

Chevrolet, GMC, Hummer, Isuzu

2.8L, 2.9L, 3.5L, 3.7L (2004-10)

Primary Tensioner



- 1. DO NOT pull the locking pin until the tensioner is fully installed with contact on the tensioner arm.**
- 2. Tighten tensioner bolts to 10 Nm (89 in. lbs.)**
- 3. Pull locking pin to activate the tensioner**