

# CABIN AIR FILTER –INSTALLATION INSTRUCTIONS


Part No.: **CAF1872P**

Est. Installation Time: **less than 15 min.**

Buick Allure(10), Encore (13-14), Lacrosse (10-14), Regal (11-13, Verano (12-13), SAAB 9-5 (03-11)  
Cadillac SRX (10-14). Chevrolet Cruze (11-14). Malibu (13)..Sonic (12-14). Spark (13-14) Volt (11-14)

**The Cabin air filter is located behind the glove box**

1. Open the glove box
2. Remove the two rubber stoppers blocks from each side of the glove box. Pull it toward you the then pull it out to remove it –Fig. 1
3. Allow the glove box to swing down and hang by its hinges.
4. Locate the filter housing cover. Pull out the upper edge of the cover to unclip it. Swing the cover down.
5. Pull out the old filter and clean the housing
6. Insert the new filter with the air flow arrow pointing down
7. Close the housing cover.. Make sure it clips to the lock
8. Engage the stoppers (revers step 2)
9. Close glove box.

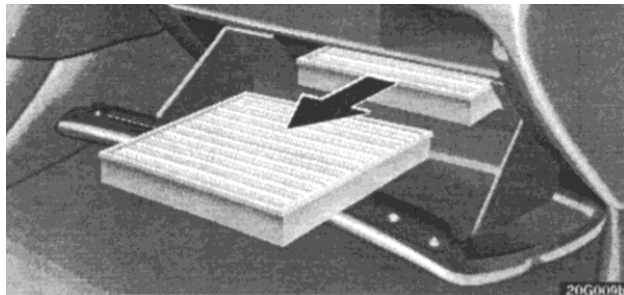

G00399049

Figure 1