

CABIN AIR FILTER – INSTALLATION INSTRUCTIONS

Part No.: **CAF1890P** Est. Installation Time: **less than 10 min.**

Dodge Durango, Jeep Grand Cherokee (11-15)


1. Open the glove compartment and empty contents.
2. There are glove compartment travel stops on both sides of the glove compartment door, partially close the glove compartment and push inwards on both sides to release the glove compartment travel stops.



Glove Compartment

- 1 — Glove Compartment Travel Stops
- 2 — Glove Compartment Tension Tether
- 3 — Glove Compartment Door


3. Pull the right hand side of the glove compartment door toward the rear of the vehicle to disengage the glove compartment door from the hinges, there might be some slight resistance.
4. With the glove compartment door loose, remove the glove compartment tension tether and tether clip by sliding the clip towards the face of the glove compartment door.

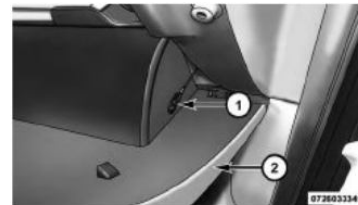

Right Side Of Glove Compartment

- 1 — Glove Compartment Tension Tether
- 2 — Glove Compartment Door

5. Remove the filter cover by disengaging retaining tab and midway snap that secures the filter cover to the HVAC housing. Disengage the midway snap by pulling the door outward. Unhinge the filter cover on the right side to fully remove the cover.

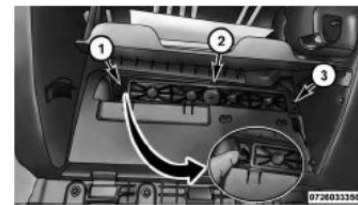

A/C Air Filter Cover

- 1 — Retaining Tab
- 2 — Mid Way Snap
- 3 — Filter Cover Hinge

6. Remove the cabin air filter by pulling it straight out of the housing.
7. Install the cabin air filter with the arrow on the filter pointing downward and reverse the steps from 6-1, ensuring the retaining tabs are fully engaged.

This is only a guide and may not be for exact model. See Owner's manual and/or local mechanic for exact instructions for the particular model.