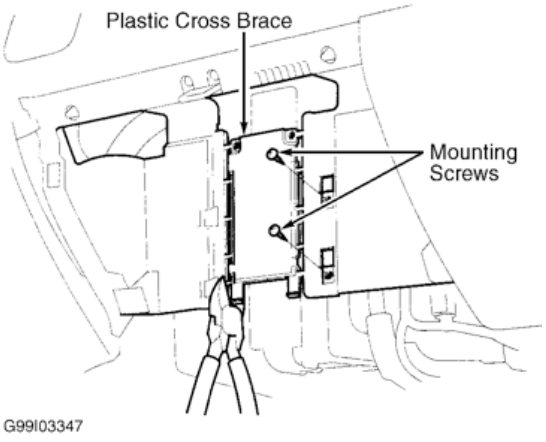
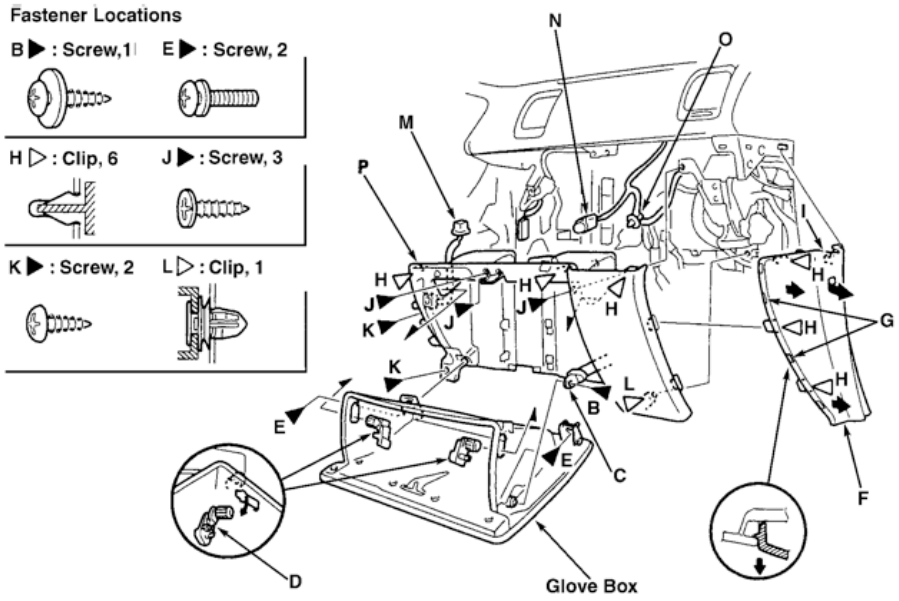
CABIN AIR FILTER – INSTALLATION INSTRUCTIONS

Part No.: **CAF1708 / CAF7708** Est. Installation Time: **less than 15 min.**

Acura TL (1999-03); Honda Accord (1998-02) Honda No. 80291-S84-A01

1. Cabin air filter is located behind the glove box.
2. Unscrew the 2 screws to the right and left of the lock latch
3. With a flat screwdriver, remove the right and left screw covers on the sides of the glove box.
4. Remove the fuse box cover on the right edge of the dashboard (passenger side door open).
5. Remove the two screws that secure the right side of the dash panel.
6. Pull out the panel below the radio and remove the screw securing the left side of the dash panel.
7. Remove the dash panel
8. Remove the three screws that go through the top brace into the glove box.
9. Open the glove box and slowly pull it loose from the dash. Once it pops free, disconnect the electrical connector from the glove
10. Pull the glove box completely free of the dash and set it aside.
11. Remove the screws on both ends of the lower metal brace. Do not remove the grounding wire that is bolted to the right side of the brace. Do not pull or stress the ground wire.
12. Remove the filter housing cover by pulling down on the latch at the bottom Fig 3
13. Pull the filter frames out of the housing - starting with the bottom one.
14. Remove the old filters from their frames. Put the new filters in the frames – Fig. 4
15. Insert one of the frames and hold it against the top of the housing to insert the other.





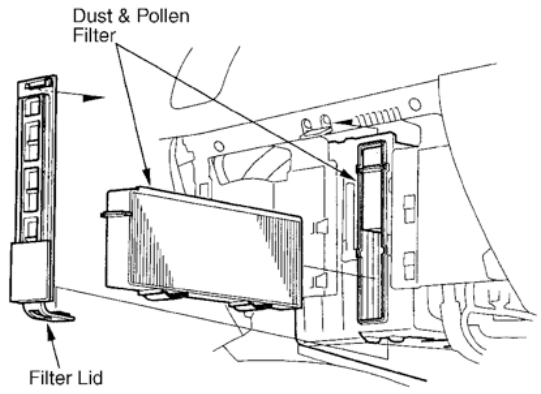


Figure 3

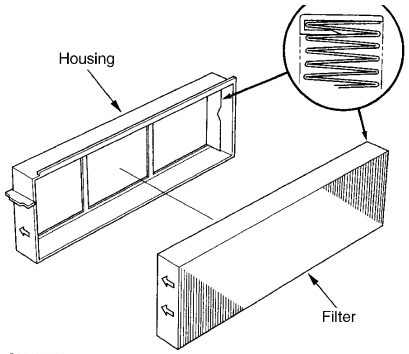


Figure 4